

SRM Software Installation Instructions

A. First Installation

1. Run JoyEastSRM_setupV3.4.8.EN client installation package, appear as shown in figure interface, then click "NEXT "; enter the installation path selection interface (figure 2), you can change the installation path. After changing the path, click" NEXT "; then enter the interface shown in figure 3, Continue to click "NEXT "; Software starts installation, as shown in figure 4. After installation completed, interface show in figure 5 will come up, then click CLOSE to exit.



Figure 1,

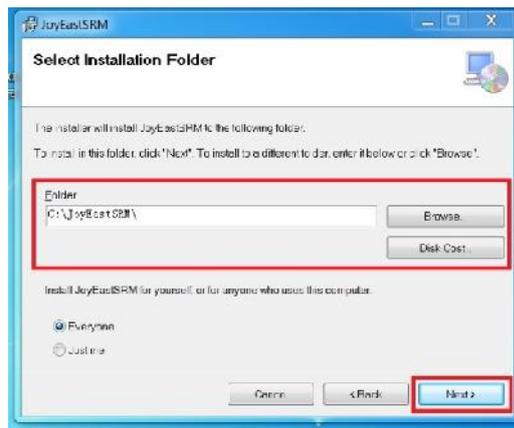


Figure 2

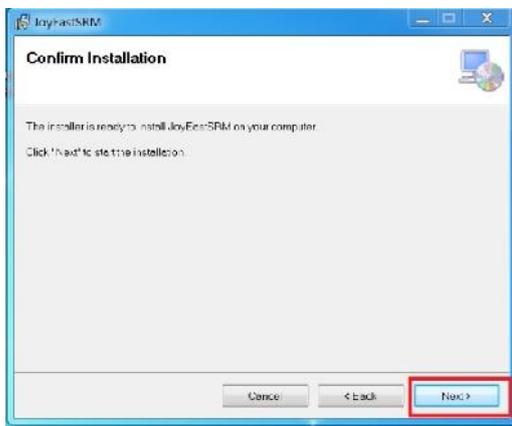


Figure 3,

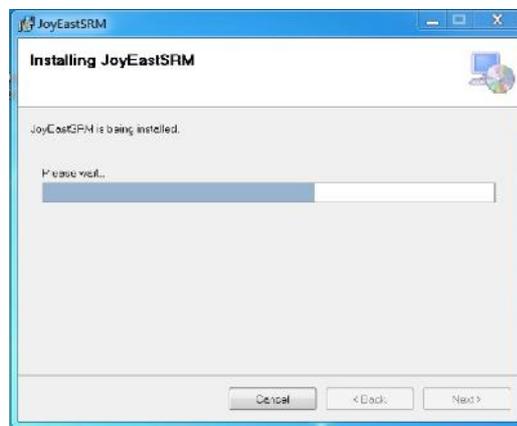


Figure 4

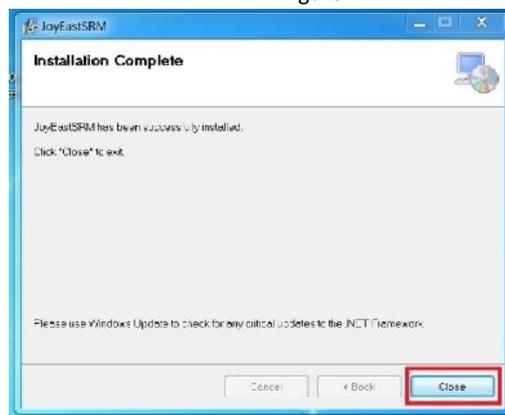


Figure 5

2. Machine code extraction

Run MACHINE CODE EXTRACTION. Exe, the machine code as shown in figure 6 will come up, copy the machine code in the frame and send it to info@srm-germany.de , waiting for the responsible person to return the reg.ini "file, as shown in figure 8.



Figure 6

3. "reg.ini" file replacement

Copy the "reg.ini" file to the installation directory and replace the file in the installation directory to run the software.

4. Software installation is complete and can be used normally.

B. Update from Existing Installation

1. Copy "reg.ini" file and save it.
2. Run the "JoyEastSRM_setup V3.4.8.EN-0409.msi" file
3. Copy your saved "reg.ini" file and paste it into the installation directory.
4. Run the program.

Changes/update information SRM software 3.4.8 to previous version

1. Optimized performance data of the refrigerants R717 / R134a / R22 / R507 for SRM-12L.
2. Optimized performance data of the refrigerant R507 about SRM-34LL for SRM-41 series.
3. Optimized large pressure ratio calculation.
4. Optimized discharge temperature calculation code.
5. Update VI selection range: 2.0-5.0 / 2.1-5.5.
6. Corrected some error alerts for SRH.